



**PowerPlug™ Disconnect - Model 103G  
(For Grounding Applications)  
Installation Instructions:**


To be sold only with installation instructions.

**! WARNING:** This is a current rated device. Use in applications involving amperage beyond its rating can be dangerous and cause electrical fires. Do not exceed maximum current and voltage levels.

**Instructions:**

**Conductor installation:**

1. Wiring must comply with all applicable electrical codes.
2. Turn off power before removing or installing disconnect.
3. Strip wires to 3/8" (9,5 mm). 18 AWG can be 3/8" to 1/2" strip.
4. Grip black load wire firmly and push conductor into green cap port marked with black. See diagram at right for proper wire insertion for load configuration.
5. Grip white load wire firmly and push conductor into same side of connector in port marked with white.
6. Grip ground wire firmly and push conductor into port marked with green circle.
7. Grip black supply wire firmly and push conductor into port opposite black load wire (black circle).
8. Grip white supply wire firmly and push conductor into port opposite white load wire (white circle).
9. Grip ground wire firmly and push conductor into port marked with green circle.
10. Use only one conductor per port and assure that no copper is exposed on any of the wires inserted.
11. See disconnect de-mate/mate installation instructions below when replacing devices.
12. The wire insertion side of this product is listed for ONE TIME USE ONLY. DO NOT REMOVE AND REPLACE WIRES.

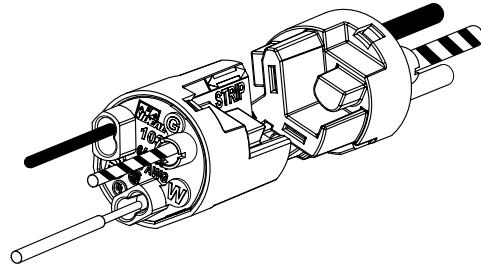

**! SAFETY NOTICE**

Improperly installed electrical wiring can be dangerous and cause electrical fires. This product must be used in accordance with the current rating and wire sizes listed. Consult local building code before doing any electrical work.

COPPER TO COPPER ONLY. Do not use on Aluminum. Temperature rating: 105°C (221°F) maximum. Flame Rated UL94V-0.


**This disconnect is rated for 600 Volts/6 Amps maximum.**

Wire Range	Line Side (White)	Load Side (Green)
Solid:	12-18 AWG	18 AWG
Stranded:	12-14 AWG (19 Strand or less)	—
Stranded Tin Bonded:	12-14 AWG (19 Strand or less) 16 AWG (26 Strand or less) 18 AWG (16 Strand or less)	18 AWG (16 Strand or less)


**Disconnect de-mate / mate installation**

1. To de-mate, grasp disconnect at each end and pull apart to separate the disconnect halves. Do NOT pull on wires.
2. To mate the disconnect, grasp each disconnect half, align halves, and push together.
3. Completed connection should appear as shown.


**Line Side (3 ports)  
(White Cap)**

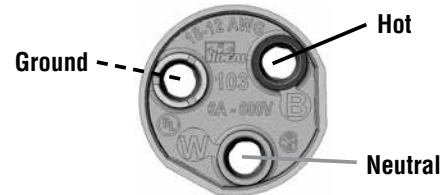

**Load Side (5 ports)  
(Green Cap)**

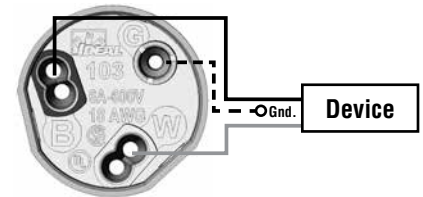

**Can also be used for ballast disconnect where grounding disconnect is desired.**

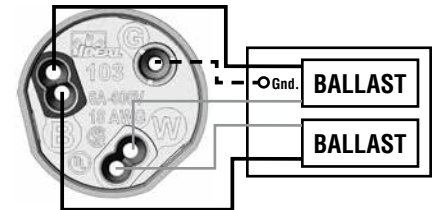

**! DANGER**

**NEVER** remove wires from product as contact with electricity can cause serious injury or death. Shut off power at the circuit breaker or remove fuse when installing this product.

**IDEAL INDUSTRIES, INC.**

1375 Park Avenue  
Sycamore, IL 60178, U.S.A.  
800-435-0705 Customer Assistance  
www.idealind.com  
**ND 7116-3**